



How to disable Lane Assist

1. Turn the engine on

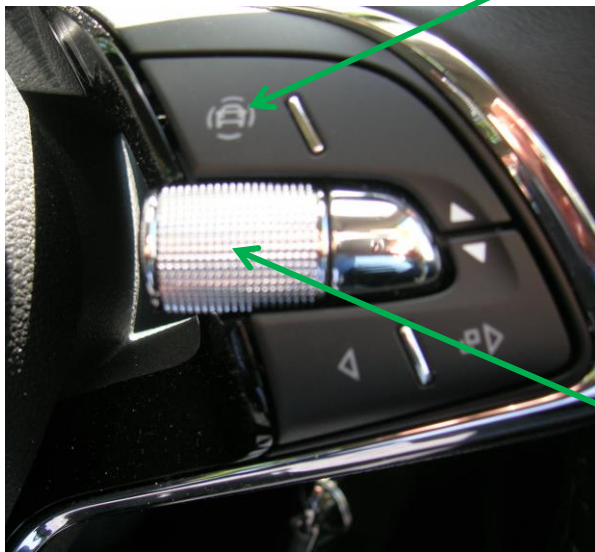


2. Click the **button** on the righthand spoke of the steering wheel:

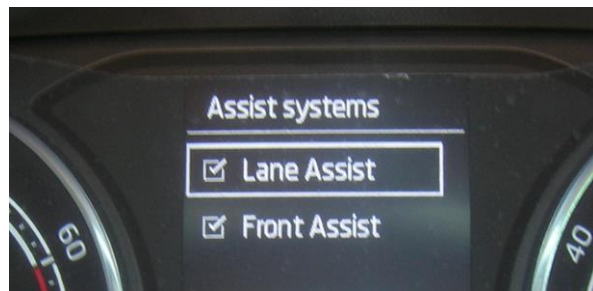

3. Above screen pops up in the dashboard showing **Lane Assist is on**

4. Click the rotary button

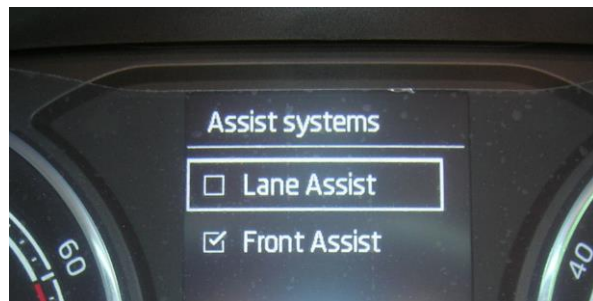

Lane then assist remains off until the engine is stopped and restarted when it will be activated again.

5. Lane assist goes off