

Remove the spring from the point adjustment screw and tighten the screw as far as possible

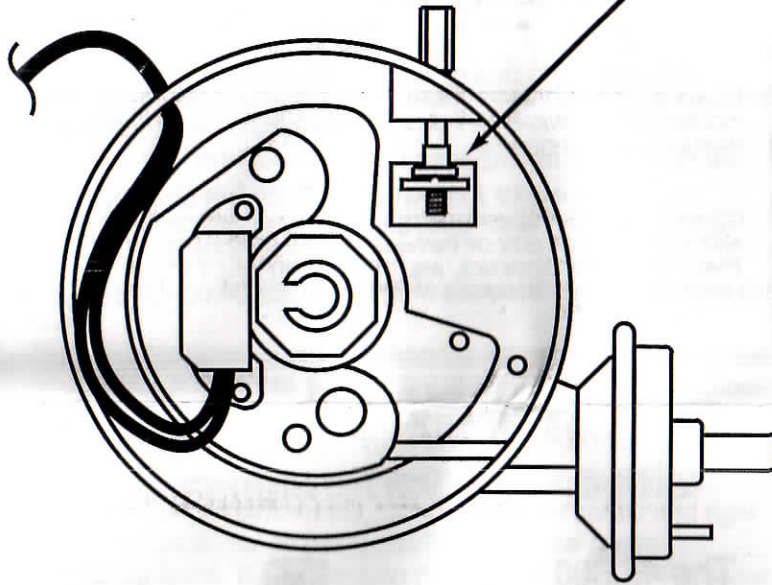


FIGURE A

FIGURE 1

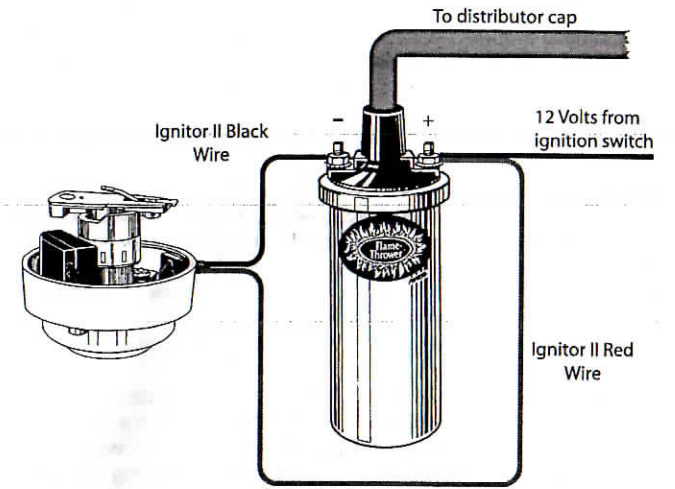


FIGURE 2

