



Pertronix Ignitor II – remove the spring from the points adjustment screw and tighten the screw as far as possible

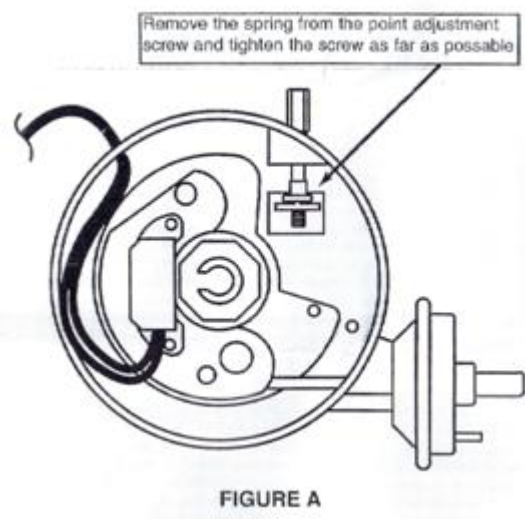

Note: the adjusting bolt is not removed, just the spring.

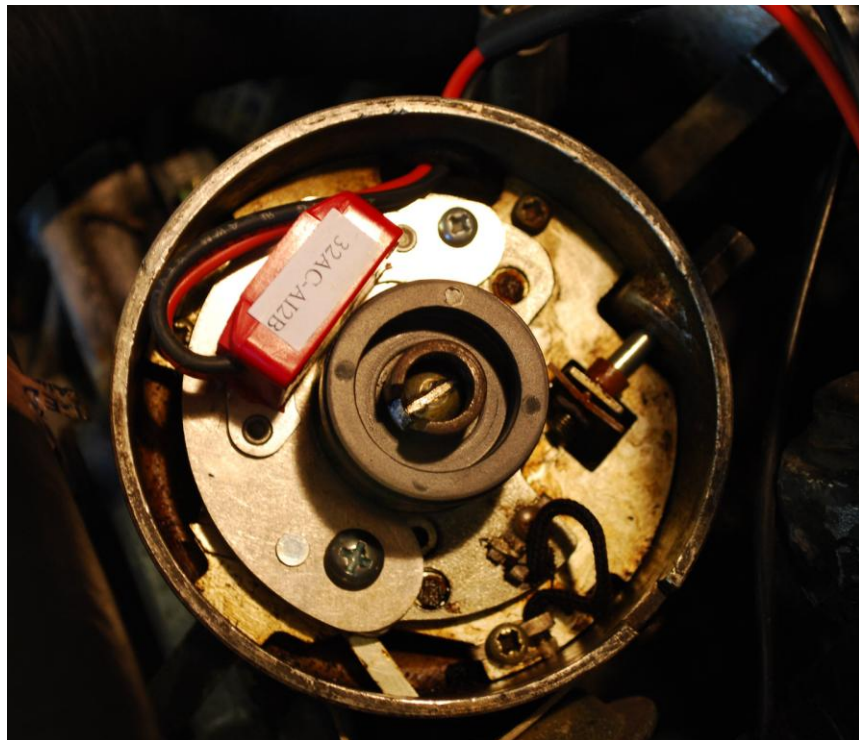